

PACKLITE™ Inflatable Kayak

OWNER'S MANUAL MODEL AE3021



1 PERSON KAYAK

IMPORTANT!

PLEASE READ THIS MANUAL CAREFULLY BEFORE PROCEEDING. AFTER READING THIS MANUAL, SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.



INTRODUCTION

Designed in California, our goal at Advanced Elements is to develop new and unique paddlesports products that enhance our customers' outdoor experience. Our focus is on designing and manufacturing "Inflatable kayaks with cutting edge technology" and providing excellent customer service. We are deep rooted in product development with patented technology, striving to develop inflatable kayaks, iSUPs, and paddlesports accessories that excel in performance, quality, and portability. All of our products have been designed to give paddlers the tools they need at the value that they deserve.

We feel that it is extremely important to make sure that our customers are having the best experience possible. One of the ways we do this is by a passionate focus on customer support. It is the feedback from our customers that has allowed us to excel and continue to grow over the years.

Our offices, near San Francisco California, are not only where we conceive of and design our innovative products, but also where you will find our excellent Customer Service team that is ready to answer any questions you might have about our products and offer premier product support.

We hope to see you someday soon, on the water!

Sincerely,

The Advanced Elements Team



TABLE OF CONTENTS

1.	Cauti	on/Safety	4
	1.1	Boating Safety	5
2.	Specification		
	2.1	Capacity	6
	2.2	Features	7
3.	Asser	nbly/Inflating/Deflation Instruction	7
	3.1	Assembly	7
	3.2	Understanding Your Valves	8
	3.3	Inflating	9
	3.4	Over Inflation Advisory	10
	3.5	Deflation and Break Down	10
	3.6	Folding	10
4.	Guide	elines for Usage	11
5.	Prope	er Care and Storage	11
6.	Repairs		12
	6.1	Repairing Small Punctures and Cuts	12
	6.2	Repairing Pinholes	12
7.	Troul	oleshooting	12
8.	State	ment of Origin	13
9.		ration of Conformity	
10.		anty and Registration	



1. CAUTION - SAFETY WARNING

Users of this product agree by their use to accept the inherent risks involved in this paddlesports activity and agree to follow all instructions, cautions, and warnings carefully before using this Kayak.

(PLEASE READ CAUTION STATEMENT CAREFULLY)

A CAUTION

SAFETY WARNING

PADDLESPORTS CAN BE VERY DANGEROUS AND PHYSICALLY DEMANDING. THE USER OF THIS PRODUCT SHOULD UNDERSTAND THAT PARTICIPATION IN PADDLESPORTS MAY INVOLVE SERIOUS INJURY OR DEATH. OBSERVE THE FOLLOWING SAFETY STANDARDS WHENEVER USING THIS PRODUCT.

- \cdot GET PADDLESPORTS INSTRUCTIONS SPECIFIC TO THIS TYPE OF CRAFT.
- · OBTAIN CERTIFIED FIRST AID TRAINING AND CARRY FIRST AID AND RESCUE/SAFETY EQUIPMENT.
- · ALWAYS WEAR A NATIONALLY APPROVED PERSONAL FLOTATION DEVICE.
- · ALWAYS WEAR A HELMET WHERE APPROPRIATE.
- DRESS APPROPRIATELY FOR WEATHER CONDITIONS; COLD WATER AND/OR COLD WEATHER CAN RESULT IN HYPOTHERMIA. CHECK YOUR EQUIPMENT PRIOR TO EACH USE FOR SIGNS OF WEAR OR FAILURE.
- · NEVER PADDLE ALONE.
- · DO NOT PADDLE IN FLOOD CONDITIONS.
- · BE AWARE OF APPROPRIATE RIVER WATER LEVELS, TIDAL CHANGES, DANGEROUS CURRENTS, WEATHER CHANGES, AND STRONG OFF SHORE WINDS.
- · SCOUT UNFAMILIAR WATER; PORTAGE WHERE APPROPRIATE.
- \cdot DO NOT EXCEED YOUR PADDLING ABILITY; BE HONEST WITH YOURSELF.
- · CONSULT YOUR PHYSICIAN PRIOR TO BEGINNING YOUR PADDLESPORTS TRAINING.
- \cdot YOU MUST NOT USE ALCOHOL OR MIND ALTERING DRUGS PRIOR TO USING THIS PRODUCT.
- \cdot FOLLOW THE MANUFACTURER'S RECOMMENDATIONS FOR THE USE OF THIS PRODUCT.
- · IF ADDITIONAL OUTFITTING IS REQUIRED, USE MANUFACTURER'S APPROVED
- MATERIALS ONLY; DO NOT IMPAIR ENTRY OR EXIT ACCESS.
- \cdot READ OWNER'S INFORMATION PACKET PRIOR TO USING THIS PRODUCT.

THE USER OF THIS PRODUCT ACKNOWLEDGES BOTH AN UNDERSTANDING AND AN ASSUMPTION OF THE RISK INVOLVED IN PADDLESPORTS.

ADVANCED ELEMENTS, INC. TOLL FREE 866-262-9076

Please read this entire manual for additional safety information. Please pay close attention to items marked DANGER, WARNING, CAUTION, IMPORTANT, NOTICE, NEVER, and ALWAYS.

1.1 Boating Safety



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

A DANGER A	Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury or substantial property damage.
A WARNING	Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury or property damage.
A CAUTION	Indicates a potentially hazardous situation which, if not avoided, may result in property damage.
CAUTION	Used without the safety alert symbol indicates a potentially hazardous situation, which, if not avoided, may result in property damage.
NOTICE	Indicates installation, operation or maintenance information which is important but not hazard-related.

The precautions listed in this manual and on the craft are not all-inclusive. If a procedure, method, tool or part is not specifically recommended, you must satisfy yourself that it is safe for you and others, and that the craft will not be damaged or made unsafe as a result of your decision. REMEMBER - always use common sense when paddling YOUR KAYAK!



2. SPECIFICATION

Dimensions:

Length: 7′10″ Width: 35″

Weight: 4 lbs (1.8 kg)

Max. Person Capacity: 250 lbs (113 kg)

Max. Persons & Gear Capacity: 250 lbs (113 kg)

Recommended Pressure:

Main chambers: 2.0 psi (0.14 bar) Floor chamber: 1.0 psi (0.07 bar)



2.1 Capacity

The person/load capacity is determined by the availability of proper seating on the kayak. Acceptable seating determines the number of passengers, not the overall load capacity.



PackLite™ Kayak Capacity Label

WARNING: Do not exceed the certified maximum capacities under any circumstances. Overloading will reduce freeboard and increase the likelihood of swamping, especially in heavy seas. Overloading causes handling to become sluggish, making it difficult to react quickly.

2.2 Features

SPECIAL FEATURES:

Ultra Compact: Lightweight PVC free materials provide compressibility and compactibility.

Durable and Light: Unique reinforced material provides durability in a lightweight design.

Stable: 35" width provides increased stability.

Easy to Set Up: TwistlokTM valve and high flow military style valves allow for quick setup time.



3. ASSEMBLY/INFLATING/DEFLATION INSTRUCTION

3.1 Assembly

Your kayak comes from the factory pre-assembled.



3.2 Understanding Your Valves

Advanced Elements PackLite TM kayak uses both military style valves and the Twistlok TM valve. The following notes and figures will have details on how to operate the valves.

To Inflate: The valve's plunger stem should be in the up/outward position flush with the valve opening.

To Deflate: The valve's plunger stem should be set in the down/inward position recessed in the valve opening.

In order to switch the valve from inflate to deflate or vice-versa, simply use your finger to press the valve stem down/inward and rotate it a 1/4 turn to either lock it down for deflate, or unlock it (stem will spring up) for inflate.

How the Military Style Valve Works:

When the valve is in the inflate (up/outward) position, the air being pumped in pushes the spring-loaded plunger open, allowing air to enter the air chamber, but not letting it escape. When the valve is in the deflate (down/inward) position, the spring loaded plunger is wide open allowing the air to come rushing out of the air chamber. If the valve is in the inflate position, the valve's plunger stem will be above the rim of the valve opening. If the valve is in the deflate position, the valve's plunger stem will be down and flush with the rim of the valve opening. To change the valve from the inflate position to the deflate position, simply use your finger to press the valve plunger stem down/inward, and give it a 1/4 turn. This will lock the plunger open and allow the air to rush out. Use the same procedure in reverse to unlock the valve plunger, allowing it to spring up into the inflate position.

Special Note: If you are using a 12v inflator, like those that come with most inflatable mattresses or those that plug into car cigarette lighters, you may need to have the valve in the deflate (down/inward) position because these types of pumps typically do not provide enough air pressure to press the plunger open to allow air into the air chamber. Additionally, 12v inflators do not provide enough pressure to fully inflate the kayak, so you will need a secondary pump to finish the job.



Deflate Position



Inflate Position

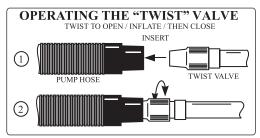


Figure 2. Inflate/Deflate Twist Valve

To begin inflating your kayak, you will need a **Bellows Foot Pump** or a **Double Action Hand Pump**. Never use compressors, CO2 or compressed air as they may damage your kayak.

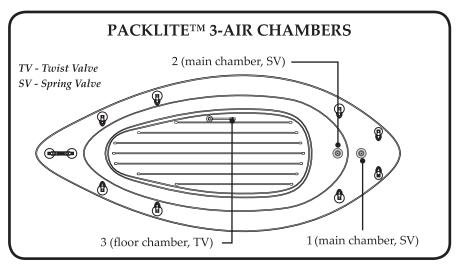


Diagram of Inflation Chambers

3.3 Inflating

IMPORTANT: Inflate your kayak in the following order. **Failure to follow these instructions may cause damage to your kayak. Do not over inflate.** Be sure to read directions on operating the spring valves and twist valves located in the section "*Understanding Your Valves*".

- 1. Inflate chamber 1 "main1" until the kayak looks about half way inflated.
- 2. Inflate chamber 2 "main2" until the kayak feels firm to the touch. (2.0 PSI)
- 3. Inflate chamber 3 "floor" until firm (1.0 PSI). Do not over inflate! The floor should still be relatively soft and have some "give" to it. You should be able to press your finger into the floor and touch through to the bottom side.
- 4. Make sure all valves are closed tightly and properly.

NOTE: Ideally you want to put about half of the air in Chamber 1 and half into chamber 2. This way if you were to loose pressure in one chamber then you would have the other chamber to float the kayak.



3.4 Over Inflation

A CAUTION: Water temperature and weather will affect the air pressure of the kayak. In cold weather and water your kayak will lose some pressure. If this occurs, you may want to add a bit more air to the kayak to improve performance. In hot weather or prolonged sunlight, the air inside the kayak will expand. You must let some air out of the appropriate chambers to prevent the kayak from failing due to overpressure. You should avoid exposing your kayak to extreme temperatures (hot or cold).


3.5 Deflation

- 1. Remove the caps from chamber 1 and 2.
- 2. Push the stem inward and rotate to the deflate position. Do this on both valves.
- 3. Twist the valve body open on chamber 3 to release the air.
- Once the chambers are deflated you can use your pump to vacuum out any additional air for improved folding.

3.6 Folding

NOTICE: Reverse your pump to completely deflate all chambers.

1. Completely deflate all air chambers and thoroughly dry the kayak.

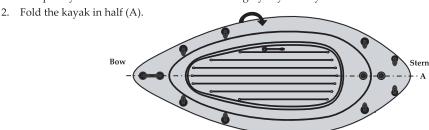

3. Fold the kayak in half once again (B).



 At the bow, fold the kayak inward (C and D) in approx 7" segments untill completely rolled up (E).



5. Place into carry bag.



4. GUIDELINES FOR USAGE

Paddlesports can be very dangerous and physically demanding. The user of this product should understand that participation in paddlesports may involve serious injury or death. Observe the following safety standards whenever using this product. The user of this product acknowledges both an understanding and an assumption of the risk involved in paddlesports.

After you have inflated your kayak and before you put it in the water, inspect your equipment for obvious signs of wear or failure. Review local rules and regulations and read again the "CAUTION" statement.

Most areas have local laws and regulations about the use and equipment of small boats. Usually a phone call to the local authorities will provide you with the needed information. Some areas may require that you register and display a registration number on the front of your kayak. Once you have been issued a number, it is best to affix it to the kayak by printing it on the material with a permanent ink marker. If you are required to display a sticker or vinyl letters, an inflatable boat ID kit can be purchased at most marine stores.

Your kayak is designed to be paddled with a double bladed kayak paddle. Paddle with short and even strokes. Keep the blade close to the kayak and the paddle almost vertical. Pull with your lower hand and push with your upper hand. To reduce the amount of swaying at the front of the kayak, ease off on the force of your stroke. Paddling with a backward stroke can sometimes offer quick maneuverability.

ALWAYS practice safety and take the time to learn about the area where you are paddling. Get official information about the local tides and currents before paddling there. Be careful that you do not over estimate your strength, your endurance or your skill. Be careful never to under estimate weather conditions. Be aware of the dangers before you begin. Be aware of your skill level. Be sure you understand and accept the risk of these dangers. There are many paddling clubs all over the world. These can be a great source of information on places to paddle, people to paddle with and most importantly, continued safety practices.

5. PROPER CARE AND STORAGE

Your inflatable kayak is made of very durable materials. However, like anything else, proper use and care will increase the life of your kayak. Before storing your kayak, make sure it is both CLEAN and DRY. You may clean your kayak with a mild soap and water. **NEVER** use strong solvents to clean your kayak as they will destroy the material.

If your kayak has been used in salt water, rinse it off with fresh water and allow it to dry before storing. Use a dry towel to wipe up all moisture. It should be deflated and kept out of direct sunlight when stored. Avoid exposure to extreme temperatures (hot or cold). If your boat is exposed to freezing temperatures while storing, allow it to warm up before unfolding.



6. REPAIRS

All kayaks come with a repair kit that includes glue and several patches. This should remain with the kayak in the event that you may need it. If service is required for your kayak, please call 866-262-9076 for assistance.

6.1 Repairing Small Punctures and Cuts

- 1. Cut a rounded patch at least 1/4" or 1/2" larger than the hole or cut.
- 2. Clean the area where the patch will be placed with water and/or mild soap.
- 3. Make sure all surfaces are dry.
- 4. In a well ventilated area, spread a thin layer of glue on both the patch and on the damaged area. Let it sit for three to five minutes or until tacky.

6.2 Repairing Pinholes

- 1. Inflate the kayak. Locate the pinhole by sponging soapy water over the tube until you see air bubbles. Mark the location of the pinhole.
- 2. Deflate the tube and dry the affected area. Apply a drop of glue to the pinhole
- 3. Allow glue to dry completely.
- 4. Do not inflate the kayak for at least twelve hours.

SOLUTION

7. TROUBLESHOOTING

Does not hold air while

The floor has formed a

large bubble.

PROBLEM

inflating	should be in the open position is when you are deflating. Make sure that the plunger is closed to inflate. Push the plunger in and rotate counter-clockwise.
The kayak is sagging.	Be sure that the right pump is being used. You need a bellows foot pump or a double action hand pump. A 12-V electric does not supply enough pressure to fully inflate the kayak. The 12-V can be used to partially inflate the kayak but one of the other pumps is needed to top it off.
The kayak will not hold full pressure for more than couple of hours.	Make sure that the valve plunger is in the closed position. It should only be open when deflating. If it is open, the only seal is the rubber gasket inside the cap. Even then, a little air may still leak out.
The kayak still loses air.	If you have checked all the previous possible reasons for the kayak losing air, then there may be a pinhole or hole somewhere on the tube. Inflate the kayak. If you cannot see or hear where a leak may be, take a clean rag with soapy water and begin rubbing the tube. If a hole is present, bubbles will continually form. Repair using repair kit. If it is a very small pinhole, a dab of the glue may be sufficient.

have to replace the kayak.

The spring valve uses a plunger system. The only time the plunger

If two of the ridges in the floor have formed one large one, the I-beam

has come apart. This is caused by over inflation. It cannot be fixed. You

Note: If your state requires the licensing of this boat, please use the form below. If you need any assistance filling out this form, please contact Advanced Elements Customer Service Department.

MANUFACTURER'S STATEMENT OF ORIGIN FOR A VESSEL SOLD IN THE STATE OF_____

_	-		ew boat described below, the pr	
		da	y of, 20)on
Invoice#				
Address				
City, State, Zip	Model		Manufacturer's Hull Ide	
Model Name		rear		
O PackLite™ Kayak (AE302			HIN#	
Type: Kayak	Hull M	aterial: Pol	lyurethane/Polyester	
Length Overall: 7'10"	Beam: 3	35"		
U. S. Coast Guard Capacity	Plate Information (where app	olicable):	
Maximum persons				
Maximum weight c	apacity (persons &	gear): 250	lbs (113 kg)	
_		-	cansfer of such new boat and th	at all
information given herein is				
Signature	P.O. Box 5128	3 Concord,	, CA 94524	
		ASSIGNN	MENT	
FOR VALUE RECEIVED, in				
the undersigned hereby tran		_	and the boat described therein	
Address				
		_	red in this or any other state; A	
Elements, Inc. also warrants	the title of said bo	at at time o	of delivery, subject only to the li	ens and
encumbrances as set out be	ow:			
Amount of Lien Da			Address	
Dates				
Transferrer (Firm name) Sig				
– Refore me personally appea	red		who by me being duty	sworn under
			ect. Subscribed and sworn to m	
this day of				ic belote
any 01			Data commission avniros	

(SEAL)

Declaration of Conformity

(according to ISO/IEC Guide 22 and EN 45014)

Manufacturer's Name: Advanced Elements, Inc.

Manufacturer's Address: P.O. Box 5128

Concord, CA 94524

declares, that the product:

Product Name: PackLiteTM Kayak Model Number (s): AE3021

to which this declaration relates, meets the essential health and safety
requirements and is in conformity with the relevant EU Directives listed below:

General Product Safety Directive

using the relevant section of the following EU standards and other normative documents:

EN ISO 6185-1 : 2001 ABYC H-29: 2012

Date: January 1, 2016

Clay Haller, President

This product complies with European directives for recreational vessels as published by the International Organization for Standardization (ISO).

LIMITED WARRANTY

Advanced Elements, Inc. warrants this product to be free from defects in material or workmanship for a period of one year from the date of purchase. Products that prove to be defective under conditions of normal and proper use during the warranty period because of defective workmanship or faulty material will be replaced or repaired without charge. For warranty service, contact Advanced Elements, Inc.

Advanced Elements, Inc shall inspect all warranty claims and in the event of a defect, repair or replace the defective part or entire item, at its option. The purchaser must, before return of a defective product, obtain from Advanced Elements, Inc, a return authorization number and return center address. Please write or call as listed below. Once an authorization number is obtained, the purchaser must ship the product, POSTAGE PREPAID, to Advanced Elements, Inc for repair. Do not ship to P.O. Box address as it may be sent back.

This warranty does NOT cover:

Products used for rental, for hire or in professionally guided tours and other uses not considered normal recreational purposes; and punctures, cuts and abrasions sustained in normal use; and items involved in accidents; and items damaged in white water mishaps, and other unreasonable uses or improper storage.

Advanced Elements, Inc shall within (30) days from receipt of an authorized return from purchaser, perform its responsibilities in conformance with this warranty.

THERE ARE NO WARRANTIES WHICH EXTEND BEYOND THE DESCRIPTION OF THE FACE HEREOF. ADVANCED ELEMENTS SHALL NOT BE HELD LIABLE FOR INCIDENTAL AND CONSEQUENTIAL DAMAGES.

THIS WARRANTY IS INCLUSIVE IN LIEU OF ALL OTHER WARRANTIES.

This warranty gives you specific legal rights, and you may also have other rights that vary from state to state.

Advanced Elements, Inc.

P.O. Box 5128, Concord, CA 94524

Toll Free - 866-262-9076 - email info@advancedelements.com - www.advancedelements.com

ADVA	INCED E	LEMENTS (PLEASE TYPE			EGISTRAI	ION
Please comp		rd to Advanced E			0 ,	ur product.
		Mail to: Adva		,		
	P	O. Box 5128,	-		4	
		Attn: Warr	anty Depar	tment		
Address						
City			St	tate	Zip	
Model		Seria	al # (12 chara	cters) XZ	E	
Purchase Dat	e				(located at re	ear of boat)
Store Name _						
City						
Email						
Thank you for re	esponding to the	following				
1. How did you	first learn of thi	is product?				
O Dealer	O Friend	O Magazine	O Radio	O TV	O Catalog	O Other
2. What most in	fluenced your d	ecision to purchas	se this product?	•		
O Price	O Features	○ Style	O Quality	O Otl	oor	

IMPORTANT!

PLEASE READ THIS MANUAL CAREFULLY BEFORE PROCEEDING.
AFTER READING THIS MANUAL, SAVE THESE INSTRUCTIONS
FOR FUTURE REFERENCE.

If you would like a catalog of our latest products please visit our website at www.advancedelements.com or call Toll Free 866-262-9076

PLEASE COMPLETE THE OTHER SIDE OF THIS
WARRANTY REGISTRATION CARD AND RETURN TO ADVANCED ELEMENTS, INC.

PLACE STAMP HERE



P.O. Box 5128 Concord, CA 94524 1-866-262-9076 www.advancedelements.com

Email: info@advancedelements.com